



USER MANUAL THE RING CORTEN/ OLIVE GREEN

PRODUCT INFORMATION

Welcoming, warm, and solid. Fire bowl
The Ring is a rough beauty with a
sweltering hot heart. Its curved shape
with vents between the slats providing
extra oxygen for the fire, makes a good,
hefty flame and little to no smoke. Tout
feu tout flamme, quoi.

SPECIFICATIONS

- Diameter: 105 cm
- Height: 35 cm
- Weight: ± 60 kg
- Corten steel
- Heat resistant powder coated steel
(Olive green version only)
- Including adjustable feet
- Including ash tray

GET IN TOUCH

Questions, comments or suggestions
relating to a product on our website?
Feel free to get in touch with us!

Wünder – Ovenhoek 5, 8800 Roeselare, Belgium
+32 51 79 17 31 – info@wunder.be



COR-TEN STEEL

Exposed to the weather, Cor-ten steel takes on a life of its own. Inevitable rainfall and other precipitation will ignite a rusty oxidation layer to form, protecting it against further corrosion. The natural formation of this barrier can take up to 1 year.

At the beginning of this process, this can cause The Ring to leave stains on the surface underneath. The risk of marks decreases over the course of just a few weeks. Rust stains can easily be washed away with a surface specific rust remover and some scrubbing.

MAINTENANCE

Because of the rusting process, the inner bowl creates its own protection layer and doesn't need much maintenance. To make The Ring last longer, it's advised to:

- Remove the ash remains after every campfire session.
- Remove any fallen leaves or dirt.
Stagnant water may harm the rust layer.
- Brush off The Ring if necessary with a hard brush and clean water.
- place The Ring in an open area in winter as it will dry faster and fewer leaves will fall into The Ring.

POWDERCOATED STEEL

OUTER RING OF THE RING OLIVE GREEN

The Powder coating used for The Ring is specifically developed to protect surfaces exposed to extreme high temperatures. The scratch and chip resistant characteristics of the coating will protect The Ring for years to come.

The brighter the color of The Ring, the more careful you should be about fire coming too close to the lacquered outer ring of The Ring. Abundant heat can cause the coating to turn darker and become soft thus more sensitive to scratches. Remove burning logs on the outer ring immediately.

MAINTENANCE

- Clean with warm water and a sponge.
- Use non-abrasive soap for stubborn stains.
- Do not use an abrasive sponge but soft sponge or wipe.
- Minor damage can be touched up with a paint pen in the same RAL color. Contact Wunder for more details.
- Do not use a pressure washer to clean The Ring. This will only damage the product.

GET IN TOUCH

Questions, comments or suggestions relating to a product on our website? Feel free to get in touch with us!



SAFETY PRECAUTIONS

Never use The Ring in an enclosed space. Additionally, it's also recommended to not place The Ring near low hanging branches that might catch fire.

A stable, fireproof concrete, stone or tiled surface is the safest space to use The Ring. Make sure to never place The Ring on a flammable surface. During drier periods, like summer, you should err on the side of caution while using The Ring in dry grass fields, where fire spreads easily and quickly.

Dry wood will burn easier and cleaner than wet wood and will give you a lot less smoke. Never use gasoline, oil or any kind of highly flammable substances to light your fire. These substances are hard to control if combined with fire and can lead to dangerous situations.

Never leave The Ring unattended when in use and keep children at a safe distance. There's always a small chance that you get hit by sparks and embers.

Maintain a bucket of water and a shovel nearby to control the fire if necessary.

STARTING + MAINTAINING A FIRE

Place a small amount of tinder in the center of The Ring. Arrange kindling (small sticks) around the tinder in a teepee shape. Stack firewood logs around the kindling structure.

Using matches or a lighter, carefully light the tinder in several places. Blow gently to encourage the flames to spread.

Ensure the fire doesn't become too large or uncontrollable. Avoid burning wood too close to the outside of The Ring. Keep it as centered as possible.

AFTER THE FIRE

When possible, allow the fire to burn down completely or pour water over the coals, using a shovel to quench them thoroughly. Repeat until you no longer hear hissing sounds or see steam rising. Use your hand to feel for any remaining warmth in the coals. Don't leave a campfire until it's completely extinguished and cool to the touch.

Use the provided ash tray to dispose of ashes and debris in designated containers or follow local guidelines.

GET IN TOUCH

Questions, comments or suggestions relating to a product on our website? Feel free to get in touch with us!

